

Part Number	Part Description	Year	Make	Model
01-103-01	Rear Lens	1973-1975	Moto Ski	Cadet 250
01-103-01	Rear Lens	1973-1974	Moto Ski	Capri 296,340,440
01-103-01	Rear Lens	1974-1975	Moto Ski	Chimo 440
01-103-01	Rear Lens	1974-1975	Moto Ski	Futura 295,340,440
01-103-01	Rear Lens	1974-1975	Moto Ski	Grand Sport 440
01-103-01	Rear Lens	1973	Moto Ski	MS-f, MS-s 340,400,440
01-103-01	Rear Lens	1974-1975	Moto Ski	TS-400
01-104-06	Rear Lens	1971	Ski-Doo	Alpine 399R,640ER
01-104-06	Rear Lens	1972	Ski-Doo	Alpine 440,640E
01-104-06	Rear Lens	1971-1972	Ski-Doo	Elan 250
01-104-06	Rear Lens	1972	Ski-Doo	Elan 292ss
01-104-06	Rear Lens	1971-1972	Ski-Doo	Nordic 399,640
01-104-06	Rear Lens	1971-1972	Ski-Doo	Olympique 300,335,399
01-104-06	Rear Lens	1971-1972	Ski-Doo	TNT 292,340,400,440,640,775
01-104-06	Rear Lens	1971	Ski-Doo	Valmont 399R, 640ER
01-104-06	Rear Lens	1972	Ski-Doo	Valmont 440R, 640ER
01-104-13	Rear Lens	1975	Moto Ski	Nubik 300,300E, Sonic 340TS
01-104-13	Rear Lens	1976-1983	Moto Ski	All Models
01-104-13	Rear Lens	1973-1983	Ski-Doo	All Models
01-104-13	Rear Lens	1984-1996	Ski-Doo	Elan 250
01-104-13	Rear Lens	1984-1895	Ski-Doo	Alpine 503
01-104-13	Rear Lens	1984	Ski-Doo	Blizzard 9700,mx
01-104-13	Rear Lens	1984	Ski-Doo	Citation 3500
01-104-13	Rear Lens	1984	Ski-Doo	Skandic 377
01-118-07	Ignition Switch	All	Universal	3 Way 5 lugs manual start
01-118-21	Ignition Switch	1973-1976	Polaris	Colt 175,250,295,340,SS
01-118-21	Ignition Switch	1973	Polaris	Charger 295,400,530
01-118-21	Ignition Switch	1973-1974	Polaris	Custom 250,400,530
01-118-21	Ignition Switch	1973-1977	Polaris	Electra 250,340,440
01-118-21	Ignition Switch	1973-1981	Polaris	TX 250,340,440,500
01-118-21	Ignition Switch	1973	Polaris	Mustang 400,530
01-118-21	Ignition Switch	1980	Polaris	Galaxy 440
01-118-21	Ignition Switch	1981	Polaris	Cutlas SS 440E
01-118-30	Switch Block	1968-1985	Moto Ski	All Models
01-118-30	Switch Block	1965-1996	Ski-Doo	All Models
01-120-02	Dimmer Switch	1981-1983	Moto Ski	Spirit 250
01-120-02	Dimmer Switch	1981-1982	Ski-Doo	Alpine 640ER
01-120-02	Dimmer Switch	1981-1995	Ski-Doo	Elan 250
01-120-02	Dimmer Switch	1983	Ski-Doo	Alpine 500
01-120-02	Dimmer Switch	1984-1985	Ski-Doo	Alpine 503
01-120-02	Dimmer Switch	1973	John Deere	400/500/600
01-120-02	Dimmer Switch	1973-1975	John Deere	JDX 4
01-120-02	Dimmer Switch	1973-1975	John Deere	LDX 8
01-120-02	Dimmer Switch	1974	John Deere	300/400/500
01-120-02	Dimmer Switch	1974-1975	John Deere	JDX 6
01-120-02	Dimmer Switch	1975	John Deere	300/400/600/800
01-120-02	Dimmer Switch	1976-1977	John Deere	300/400
01-120-02	Dimmer Switch	1976-1978	John Deere	Cyclone 340/440
01-120-02	Dimmer Switch	1976-1978	John Deere	Liquifire 340/440
01-120-02	Dimmer Switch	1976	John Deere	Liquidator
01-120-02	Dimmer Switch	1978-1979	John Deere	Spitfire 340
01-120-02	Dimmer Switch	1973	Boa-Ski	RT-300/300E/300T/340/440/400E
01-120-02	Dimmer Switch	1973-1974	Boa-Ski	RTW300
01-120-02	Dimmer Switch	1974	Boa-Ski	Laser 440
01-120-02	Dimmer Switch	1974	Boa-Ski	RTX 300T/340/440/440B/447
01-120-02	Dimmer Switch	1975	Boa-Ski	Sonar 400
01-120-02	Dimmer Switch	1975	Boa-Ski	Ultra 447
01-120-02	Dimmer Switch	1976	Boa-Ski	Laser 340/440/440T
01-120-02	Dimmer Switch	1976	Boa-Ski	Sprint 340
01-120-02	Dimmer Switch	1976	Boa-Ski	Ultra 340/440/447

01-120-03	Kill Switch	1974-1975	Boa-Ski	Mark II 292T,340T,440T
01-120-03	Kill Switch	1974-1975	Boa-Ski	SS 340T,440T
01-120-03	Kill Switch	1973	John Deere	400/500/600
01-120-03	Kill Switch	1973-1975	John Deere	JDX 4
01-120-03	Kill Switch	1973-1975	John Deere	LDX 8
01-120-03	Kill Switch	1974	John Deere	300/400/500
01-120-03	Kill Switch	1974-1975	John Deere	JDX 6
01-120-03	Kill Switch	1975	John Deere	300/400/600/800
01-120-03	Kill Switch	1976-1977	John Deere	300/400
01-120-03	Kill Switch	1976-1978	John Deere	Cyclone 340/440
01-120-03	Kill Switch	1976-1978	John Deere	Liquifire 340/440
01-120-03	Kill Switch	1976	John Deere	Liquidator
01-120-03	Kill Switch	1978-1979	John Deere	Spitfire 340
01-120-03	Kill Switch	1973	Boa-Ski	RT-300/300E/300T/340/440/400E
01-120-03	Kill Switch	1973-1974	Boa-Ski	RTW300
01-120-03	Kill Switch	1974	Boa-Ski	Laser 440
01-120-03	Kill Switch	1974	Boa-Ski	RTX 300T/340/440/440B/447
01-120-03	Kill Switch	1975	Boa-Ski	Sonar 400
01-120-03	Kill Switch	1975	Boa-Ski	Ultra 447
01-120-03	Kill Switch	1976	Boa-Ski	Laser 340/440/440T
01-120-03	Kill Switch	1976	Boa-Ski	Sprint 340
01-120-03	Kill Switch	1976	Boa-Ski	Ultra 340/440/447
01-120-05	Dimmer Switch	1975-1977	Moto Ski	Nuvik 300/300E/340/340E
01-120-05	Dimmer Switch	1976-1979	Moto Ski	Futura 440/E
01-120-05	Dimmer Switch	1977-1979	Moto Ski	Futura 400/400E
01-120-05	Dimmer Switch	1977	Moto Ski	Nuvik 440/440E
01-120-05	Dimmer Switch	1978-1979	Moto Ski	Futura 444 LC
01-120-05	Dimmer Switch	1978-1979	Moto Ski	Nuvik 340/340E
01-120-05	Dimmer Switch	1979-1980	Moto Ski	Grand Prix Special
01-120-05	Dimmer Switch	1979-1980	Moto Ski	Super Sonic/Super Sonic Cross Country
01-120-05	Dimmer Switch	1980	Moto Ski	Futura 500/500E/LC
01-120-05	Dimmer Switch	1980	Moto Ski	Mirage I,II,IIIE
01-120-05	Dimmer Switch	1980	Moto Ski	Ultra Sonic
01-120-05	Dimmer Switch	1973	Ski-Doo	Elite
01-120-05	Dimmer Switch	1973-1974	Ski-Doo	Nordic 640ER
01-120-05	Dimmer Switch	1973	Ski-Doo	TNT 292,292S,340,340S,440,440S
01-120-05	Dimmer Switch	1974	Ski-Doo	Elite 440
01-120-05	Dimmer Switch	1974	Ski-Doo	Everest 440
01-120-05	Dimmer Switch	1974	Ski-Doo	TNT 300,340,440
01-120-05	Dimmer Switch	1974-1975	Ski-Doo	TNT F/A 340,400,440
01-120-05	Dimmer Switch	1975-1976	Ski-Doo	TNT F/C 340,340E,440,440E,440 Everest
01-120-05	Dimmer Switch	1975	Ski-Doo	Olympique 300,300E,340,340E
01-120-05	Dimmer Switch	1976-1977	Ski-Doo	Olympique 300M,300T,300T E,340,340E,Plus 440
01-120-05	Dimmer Switch	1977-1979	Ski-Doo	Everest 340,340E,440,440e
01-120-05	Dimmer Switch	1977-1978	Ski-Doo	TNT F/A 340,440
01-120-05	Dimmer Switch	1977-1978	Ski-Doo	TNT F/C 440
01-120-05	Dimmer Switch	1978	Ski-Doo	Blizzard 6500 Plus
01-120-05	Dimmer Switch	1978-1979	Ski-Doo	Elite 450 LC
01-120-05	Dimmer Switch	1978-1979	Ski-Doo	Olympique 300,340,340E
01-120-05	Dimmer Switch	1979-1980	Ski-Doo	Blizzard 5500,7500 Plus,9500 Plus, Cross Country
01-120-05	Dimmer Switch	1979-1980	Ski-Doo	Everest 444LC
01-120-05	Dimmer Switch	1980	Ski-Doo	Citation 3500,4500,4500E,SS
01-120-05	Dimmer Switch	1980	Ski-Doo	Everest 500,500E,LC
01-120-14	Kill Switch	1981	Moto Ski	Futura 500,500E,LC
01-120-14	Kill Switch	1981-1983	Moto Ski	Mirage I,II,IIIE,Special
01-120-14	Kill Switch	1981-1983	Ski-Doo	Citation 3500,4500,4500E,SS
01-120-14	Kill Switch	1981	Ski-Doo	Elite
01-120-14	Kill Switch	1981	Ski-Doo	Everest 500,500E,LC
01-120-14	Kill Switch	1981-1983	Ski-Doo	Nordic
01-120-14	Kill Switch	1982-1987	Ski-Doo	Skandic
01-120-14	Kill Switch	1984	Ski-Doo	Citation 3500

01-120-14	Kill Switch	1985-1988	Ski-Doo	Citation LS,LSE
01-120-14	Kill Switch	1985-1996	Ski-Doo	Tundra,LT
01-120-14	Kill Switch	1989-1991	Ski-Doo	Safari Citation, Citation E
01-120-10	Dimmer Switch	1974-1976	Arctic Cat	Cheetah 340/440
01-120-10	Dimmer Switch	1974	Arctic Cat	El Tigre 295/340/400/440
01-120-10	Dimmer Switch	1974	Arctic Cat	Lynx I 292/295
01-120-10	Dimmer Switch	1974	Arctic Cat	Lynx II 340/440
01-120-10	Dimmer Switch	1974	Arctic Cat	Panther 340/440
01-120-10	Dimmer Switch	1975	Arctic Cat	Cheetah/Wankel 295
01-120-10	Dimmer Switch	1975	Arctic Cat	El Tigre 340/440
01-120-10	Dimmer Switch	1975	Arctic Cat	El Tigre Z 250/340/440
01-120-10	Dimmer Switch	1975-1977	Arctic Cat	Jag 340
01-120-10	Dimmer Switch	1975	Arctic Cat	Lynx 250
01-120-10	Dimmer Switch	1975	Arctic Cat	Pantera 340/440
01-120-10	Dimmer Switch	1975-1976	Arctic Cat	Panther 440
01-120-10	Dimmer Switch	1976	Arctic Cat	Cross Country Cat 340
01-120-10	Dimmer Switch	1976	Arctic Cat	El Tigre 440/500
01-120-10	Dimmer Switch	1976	Arctic Cat	Jag 275
01-120-10	Dimmer Switch	1976	Arctic Cat	Pantera 5000
01-120-10	Dimmer Switch	1976	Arctic Cat	Panther 500
01-120-10	Dimmer Switch	1977-1978	Arctic Cat	Cheetah 5000
01-120-10	Dimmer Switch	1977	Arctic Cat	El Tigre 4000/5000
01-120-10	Dimmer Switch	1977-1979	Arctic Cat	Lynx 2000S/2000T
01-120-10	Dimmer Switch	1977-1979	Arctic Cat	Pantera F/A, FC
01-120-10	Dimmer Switch	1977-1978	Arctic Cat	Panther 4000/5000
01-120-10	Dimmer Switch	1978-1979	Arctic Cat	Jag 2000/3000
01-120-10	Dimmer Switch	1978	Arctic Cat	El Tigre 5000 F/A,6000 LC
01-120-10	Dimmer Switch	1979	Arctic Cat	El Tigre F/A,FC
01-120-10	Dimmer Switch	1979	Arctic Cat	Panther 5000
01-140-10	Condenser	1977-1979	Arctic Cat	Lynx 2000S
01-140-02	Condenser	????		
01-140-09	Condenser	1972-1974	Moto Ski	Cadet 250
01-140-09	Condenser	1972	Moto Ski	Grand Prix 340/440
01-140-09	Condenser	1972-1975	Moto Ski	Zephyr 340/440/440E
01-140-09	Condenser	1973	Moto Ski	Capri 340/340T-SS/440/440T-SS
01-140-09	Condenser	1973	Moto Ski	MS-f, MS-s 340,440
01-143-02	Coil	All	BSE	BSE Motor
01-143-02	Coil	All	CCW	CCW Engine
01-143-02	Coil	1974-1974	John Deere	400/500
01-143-02	Coil	1973-1975	John Deere	600
01-143-02	Coil	1973-1975	John Deere	JDx 8
01-143-02	Coil	1974-1975	John Deere	JDx 4
01-143-02	Coil	1974-1975	John Deere	JDx 6
01-143-02	Coil	1975	John Deere	800
01-143-02	Coil	1972-1975	Moto Ski	Cadet 250
01-143-02	Coil	1972	Moto Ski	Grand Prix 340/440
01-143-02	Coil	1972-1973	Moto Ski	Zephyr 340/440/440E
01-143-02	Coil	1973	Moto Ski	Capri 340/340T-SS/440/440T-SS
01-143-02	Coil	1973	Moto Ski	MS-f, MS-s 340,440
01-143-02	Coil	1974-1974	Moto Ski	Chimo 440
01-143-02	Coil	1974	Moto Ski	Futura 340/3440
01-143-02	Coil	1974-1975	Moto Ski	Grand Sport 440
01-143-04	Coil	1972-1974	Polaris	Colt 175/250
01-143-04	Coil	1974	Polaris	Custom II 250
01-143-04	Coil	1975-1976	Polaris	Electra 250
01-143-04	Coil	1975	Polaris	TC 175/250
01-143-04	Coil	1976	Polaris	Colt 175/250
01-143-04	Coil	1977	Polaris	Colt 250
01-143-04	Coil	1979-1981	Polaris	Gemini 244
01-143-07	Coil	1978-1979	Arctic Cat	Jag 2000/3000
01-143-07	Coil	1978-1979	Arctic Cat	Lynx 2000T

01-143-07	Coil	1980	Arctic Cat	Jag 3000 F/A
01-143-08	Coil	1976	Arctic Cat	El Tigre 440/500
01-143-08	Coil	1976	Arctic Cat	Jag 275/340
01-143-08	Coil	1977	Arctic Cat	El Tigre 4000/5000
01-143-08	Coil	1977	Arctic Cat	Jag 340
01-143-08	Coil	1977-1978	Arctic Cat	Lynx 2000T
01-143-08	Coil	1980	Arctic Cat	Jag 2000 F/A
01-143-08	Coil	1978	Arctic Cat	El Tigre 6000 L/C / 5000 F/A
01-143-08	Coil	1979	Arctic Cat	El Tigre LC
01-143-08	Coil	1979-1980	Arctic Cat	El Tigre F/A
01-143-08	Coil	1981	Arctic Cat	El Tigre 5000 F/A
01-143-09	Coil	1973	John Deere	JD 295/S
01-143-09	Coil	1975	John Deere	JD 340/S
01-143-09	Coil	1976-1977	John Deere	400
01-143-09	Coil	1976-1978	John Deere	Cyclone 340/440
01-143-09	Coil	1976-1978	John Deere	Liquifire 340/440
01-143-13	Coil	1979-1982	Polaris	Centurion 500
01-143-13	Coil	1983-1986	Polaris	Indy 600
01-143-13	Coil	1985-1986	Polaris	Indy 600LE
01-143-13	Coil	1998-1990	Polaris	Indy 650/650SKS
01-143-10	Coil	1982-1984	Ski-Doo	Citation 3500/3500E
01-143-10	Coil	1983	Ski-Doo	Skandic 277
01-143-10	Coil	1986-1988	Ski-Doo	Citation LS/LSE
01-143-10	Coil	1986-1990	Ski-Doo	Tundra,LT
01-143-10	Coil	1989-1990	Ski-Doo	Safari Citation, Citation E
01-143-18	Coil	1973-1974	Ski-Doo	TNT F/A 340/400
01-143-18	Coil	1974-1975	Ski-Doo	TNT F/A 440
01-143-18	Coil	1975	Ski-Doo	TNT F/A 340
01-143-18	Coil	1975	Ski-Doo	TNT FC 440 Everest / E
01-143-18	Coil	1976	Ski-Doo	TNT RV 250/340
01-143-18	Coil	1977-1978	Ski-Doo	RV 340
01-143-18	Coil	1979	Ski-Doo	RV Cross Country 340
01-143-18	Coil	1976-1978	Moto Ski	Sonic 340/TS
01-143-18	Coil	1976	Moto Ski	Sonic 250
01-143-19	Coil	1979-1981	John Deere	Trailfire 340/440
01-143-19	Coil	1980-1982	John Deere	Liquifire 440
01-143-19	Coil	1982-1984	John Deere	Trailfire LX 440
01-143-21	CDI	Kawasaki Engine	Arctic Cat	OEM 3001-346 or 3001-597
01-143-30	Coil	1976	Arctic Cat	Cheetah 440/500
01-143-30	Coil	1976	Arctic Cat	El Tigre 440/500
01-143-30	Coil	1976	Arctic Cat	Jag 275/340
01-143-30	Coil	1976	Arctic Cat	Panther 440/500
01-143-30	Coil	1976	Arctic Cat	Z 440
01-143-30	Coil	1981-1985	Moto Ski	futura LC
01-143-30	Coil	1981	Moto Ski	Super Sonic
01-143-30	Coil	1981-1982	Moto Ski	Ultra Sonic
01-143-30	Coil	1984	Moto Ski	Sonic LC
01-143-30	Coil	1981	Ski-Doo	Blizzard 7500 plus
01-143-30	Coil	1981-1982	Ski-Doo	Blizzard 9500/plus
01-143-30	Coil	1981-1982	Ski-Doo	Elite
01-143-30	Coil	1981-1983	Ski-Doo	Everest LC
01-143-30	Coil	1984	Ski-Doo	SS-25
01-143-111	Coil	1977	Kawaski	Astro 340/440
01-143-111	Coil	1978	Kawaski	Inviter 340
01-143-111	Coil	1979	Kawaski	Drifter 340
01-154-31	Volt Reg	1973-1974	John Deere	400/500/600
01-154-31	Volt Reg	1974	John Deere	300
01-154-31	Volt Reg	1973	John Deere	JDX 4
01-154-31	Volt Reg	1973	John Deere	JDX 8
01-154-31	Volt Reg	1974	John Deere	JD 295/S
01-154-33	Volt Reg	1978-1979	Kawaski	Intruder 440

01-154-33	Volt Reg	1978-1980	Kawaski	Invader 340/440
01-154-33	Volt Reg	1981	Kawaski	Invader 440
01-154-33	Volt Reg	1981	Kawaski	Limited 440
01-154-33	Volt Reg	1982	Kawaski	Interceptor
01-408	CDI	1986-1989	Polaris	Indy Trail/ES/Dlx/Supertrack
01-408-02	CDI	1981	Polaris	Cutlass SS440/440E
01-408-02	CDI	1981-1982	Polaris	TXC 440
01-408-02	CDI	1982	Polaris	Cutlass SS440
01-408-02	CDI	1983	Polaris	Indy Trail/long track/Sport/SS
01-503	Headlight	1980	Polaris	TX-L Indy 340
01-503	Headlight	1981-1982	Polaris	Centurion 500
01-503	Headlight	1981	Polaris	Cutlass 340
01-503	Headlight	1981-1982	Polaris	Cutlass SS440
01-503	Headlight	1983	Polaris	Indy 600/Cross Country/Trail
01-503	Headlight	1983-1986	Polaris	Long Track
01-503	Headlight	1983	Polaris	Sport/Super Sport
01-503	Headlight	1983-1990	Polaris	Star
01-503	Headlight	1984-1987	Polaris	Indy 400/600/Trail
01-503	Headlight	1984-1985	Polaris	SS
01-503	Headlight	1986-1990	Polaris	Sprint/ES
01-503	Headlight	1987-1990	Polaris	Star Track
01-503	Headlight	1988-1989	Polaris	Sport/Trail
01-503	Headlight	1976-1977	Yamaha	SRX 340/440
01-503	Headlight	1977-1978	Yamaha	EC 250/340
01-503	Headlight	1978-1980	Yamaha	SRX 440
01-503	Headlight	1979-1982	Yamaha	EC 540
01-503	Headlight	1979-1981	Yamaha	ET 250/300/340
01-503	Headlight	1981-1983	Yamaha	EC 340
01-503	Headlight	1982-1991	Yamaha	BR 250
01-503	Headlight	1982-1983	Yamaha	ET 300/340
01-503	Headlight	1983-1991	Yamaha	VMX 540
01-503	Headlight	1980-1991	Yamaha	SR 540
01-503	Headlight	1980-1983	Yamaha	SS 440
01-503	Headlight	1985	Yamaha	BR 250
01-503	Headlight	1985-1990	Yamaha	XL 540
01-503	Headlight	1992-1996	Yamaha	BR 250
01-506	Headlight	1981-1984	John Deere	All Models
01-507	Headlight	1984-1988	Yamaha	EC 340
01-507	Headlight	1984-1988	Yamaha	ET 340
01-507	Headlight	1989	Yamaha	CF 300
01-507	Headlight	1989-1996	Yamaha	CS 340
01-507	Headlight	1989-1991	Yamaha	ET 400
01-508	Headlight	1988	Polaris	Indy 400/650
01-508	Headlight	1989-1990	Polaris	Indy 400/500/500 Classic/SKS/SP/650/650SKS
01-508	Headlight	1990	Polaris	Indy Trail Supertrak/Widetrack
01-508	Headlight	1990	Polaris	Indy Trail Dlx
01-508	Headlight	1991	Polaris	Widetrak
01-508	Headlight	1984-1996	Yamaha	PZ480
01-508	Headlight	1987-1993	Yamaha	EX 570